

## INSTALLATION INSTRUCTIONS: Stainless Steel Fold and Tumble Front

### Seat Bracket #4773

#### CONTENTS:

- (2) Stainless Steel Fold and Tumble Rear Seat Bracket
- (1) Stainless Steel Fold and Tumble Rear Seat Catch
- (2) 3/8" Retaining Rings
- (4) 5/16" SAE Flat Washers
- (4) 5/16-18 x 1.25" GR5 Plated Bolts



#### TOOLS NEEDED:

- 1/2" Ratchet Wrench or Socket
- 5/8" Ratchet Wrench or Socket
- Pliers

#### ADDITIONAL PARTS REQUIRED:


Bestop Trail Max II Seat // Black Denim 2 Tone- 39441-15 Spice Vinyl - 39440-37 Black Denim Vinyl - 39440-15 Charcoal 2 Tone - 39441-09 Charcoal - 39440-09 Spice Denim - 39441-37

For technical assistance please visit [duffuff.com/tech](http://duffuff.com/tech) to submit a tech request.

[www.LCResto.com](http://www.LCResto.com)  
608 Lick Creek Rd.  
Ceres, VA 24318  
1/1 03/24

**IMPORTANT: Read these instructions all the way through before starting. These parts are tig welded with stainless filler rod, pre assembled and made from high quality stainless steel. They are designed to last for a lifetime rust free. They can be painted, polished, plated or left bare. It is completely up to you.**

These instructions will detail the installation procedure of the Stainless Steel Fold & Tumble Rear Seat Bracket. This Seat Bracket is designed to allow you to bolt in an aftermarket Bestop Trailmax II (39440 or 39441 Style ONLY) Rear Fold and Tumble seat into your early bronco utilizing the factory rear seat mounting points. No drilling necessary unless you are adding this to a bronco that did not come with any of the holes for the rear seat.

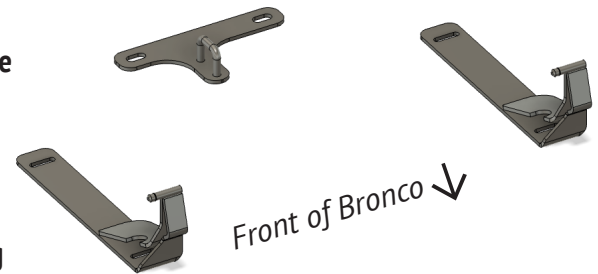


- 1) Safety First: Make sure the vehicle is on flat ground, the parking brake is set and wheels are chocked.
- 2) Disconnect the negative (-) battery cable.
- 3) Remove the brackets from the box and inspect to make sure you have all included parts & hardware.
- 4) Carefully remove your existing rear seat (if equipped). It is paramount that the original bolt locations are present and working. If you have a broken bolt etc. it will need to be removed/repared for this bracket to work. It is designed to be a bolt in, no modification necessary to the bronco installation.
- 5) You can now install each bracket to the floor loosely at this time. The two brackets will place with the pivots toward the front of the vehicle. The rear catch bracket will bolt to the factory seat belt holes with the hoop towards the front of the vehicle. The bolts will pass through your seat belts first then through the bracket into the floor. You will tighten the brackets to the floor after you have aligned everything for function.
- 6) Now you can slide the seat over the pins same as the instructions for the seat outline and secure with the E clip. Carefully lower the seat to start aligning the catch loop etc. Once happy with alignment, using your wrenches, you can snug the rear bolts of the bracket as well as the 2 bolts on the catch plate. Raise the seat and tighten the front bolts. Double check alignment and function again.
- 7) Reconnect your negative (-) battery cable, remove your wheel chocks and enjoy!

**Bestop Trail Max II  
Rear Seat**



**LCR Front Fold and Tumble  
Seat Bracket #4772**

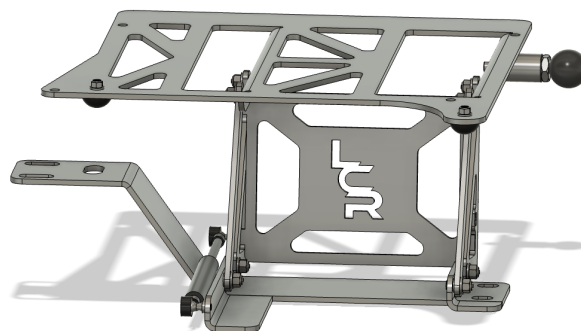

**Early Bronco Modern Door Checks  
#4225 / 4226**

